

8x10 MEDIA WALL

SETUP INSTRUCTIONS



PARTS DIAGRAM:



(4) 4' A-Pole



(4) 4' B-Pole




(2) 2' Pole



(2) Footplate



(2) Top Corner Bracket

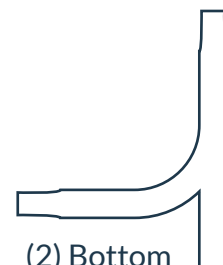

(2) Bottom Corner Bracket

THANK YOU FOR YOUR PURCHASE!

If you have questions about installation, maintenance, or take down, please call us at (800)426-9496. Our goal is that you are completely satisfied with our products. Please read this installation manual carefully and follow all instructions contained herein. Please note that the installer is responsible for the site selection, installation and use. Do not erect during inclement weather and follow all safety procedures during the installation and take down process.

Please contact all utility companies for underground services. In many states, the utilities work together and have formed a Utility Locating Service. It is your responsibility to locate all the underground services, including speaking to the owner about irrigation, pool and other special services that they may have installed. Also, please note that special precautions should be taken such that any overhead powerlines are duly noted and avoided during the tent erection process.



TentCraft Inc in no way represents the estimated holding power to be true in all cases. It is an estimate, and as such, does not imply that the figures are sufficient to hold any tent securely in windy or adverse weather conditions. The hardware installer accepts sole responsibility for the safe installation, teardown, and maintenance of any tent. TentCraft does not represent in any way that the materials provided with the purchase of the tent are sufficient enough to hold it up in windy or adverse weather conditions. There is no way for TentCraft to know the site conditions or the weather conditions at the event to be able to recommend the adequate amount of holding power needed to hold the tent safely in position. Furthermore, we are not responsible for the methods which the installer uses to erect the tent or anchor it in position. Installers **MUST** be empowered to deem the tent unsafe for occupancy if/when the weather becomes unstable. For further recommendations on determining necessary staking values, please consult the IFAI Procedural Handbook for the Safe Installation and Maintenance of Tentage and the IFAI's Pullout Capacity of Tent Stakes. These resources are available from the IFAI Tent Rental Division.

Step 1



Place media wall footplates roughly 10' apart from each other on the ground.

Step 2



Insert the bottom corner bracket into the top of the footplate. Repeat for both left & right footplates.

Step 3



Lay a 4'-A pole, 2' pole, and a 4'-B pole end to end between the footplates on the ground (in that order).

Step 4



Connect 4'-A, 2' pole, and 4'-B pole into one another to create the bottom pole section

Step 5



Insert the bottom pole section into both the left and right bottom corner brackets.

Step 6



Insert a 4'- A pole into the top of the bottom corner bracket. Repeat for both the left & right sides.

Step 7



Locate a 4'-A pole, 2' pole, and a 4'-B pole and insert them into one another to create the top pole section (in that order).

Step 8



Insert the top corner bracket onto the end of the top pole section. Repeat for both the left & right sides.

Step 9



Insert a 4' - B pole into the bottom of the top corner bracket. Repeat for both the left & right sides.

Step 10



Lay this top section on the ground.

Step 11



Locate the fabric media wall cover and open the bottom Velcro closure.

Step 12



Slip this cover over the top pole section, leaving 6" of the left & right 4' poles exposed.

Step 13



Grab top pole section from both left & right sides. Lift section up and place down into the base section.

Step 14



Pull the fabric media wall cover down the full length of the media wall.

Step 15



Velcro the media wall cover under the bottom pole section to pull the media wall taught.