


# HOW TO SETUP

## TentCraft | **Multiple Tent Walls**

These instructions refer to a standard full Velcro tent wall attachment style.

*Custom attachment styles are available.*



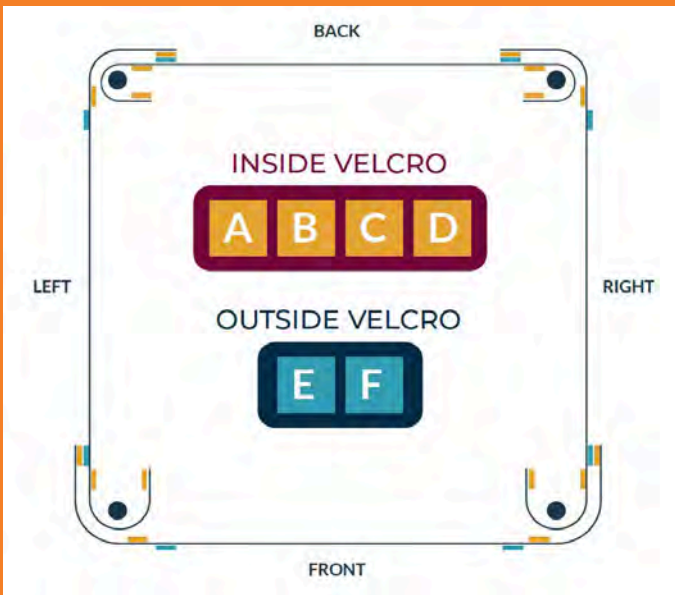

NOTES: Be sure that the wall is being installed into the correct position ie. front, back, sides. Start your setup with the back tent wall.

Standard full Velcro placement ensures that walls can be placed and wrapped in multiple ways on your tent frame as opposed to being limited to a certain layout.

Depending on how your wall is wrapping, certain strips of Velcro may be visible and possibly even cover up part of the wall art. In these cases custom Velcro placement is available at no extra cost and setup may vary.



[TentCraft.com/support](https://TentCraft.com/support)




- 1 Start with your tent fully set up and work from inside the tent. Starting with the back wall, unfold the wall and locate the top edge that is lined with Velcro.



- 2 This edge of the wall gets velcroed to the inside of the valance on the roof by starting at one end and attaching it all the way across.



- 3** Unhook the Velcro on the left and right wall flaps, wrap the opened flaps around the tent legs on each side and re-attach the hook Velcro to the loop Velcro. This will hold the wall taut across the back of the tent.

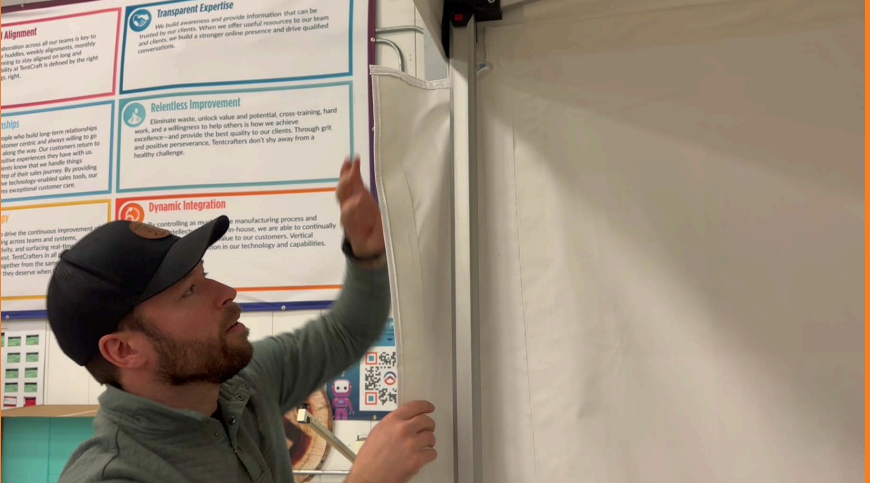


- 4** Unfold a side wall and locate the top Velcro lined edge.



- 5** The top edge of the wall gets Velcroed to the inside of the valance on the roof by starting at one end and attaching it all the way across.




- 6** Unhook the Velcro on the left and right wall flaps. Wrap the opened flaps around the front tent legs and re-attach the hook Velcro to the loop Velcro. Wrap the opened back flap around the back wall of the tent, attaching to the strip of Velcro there.

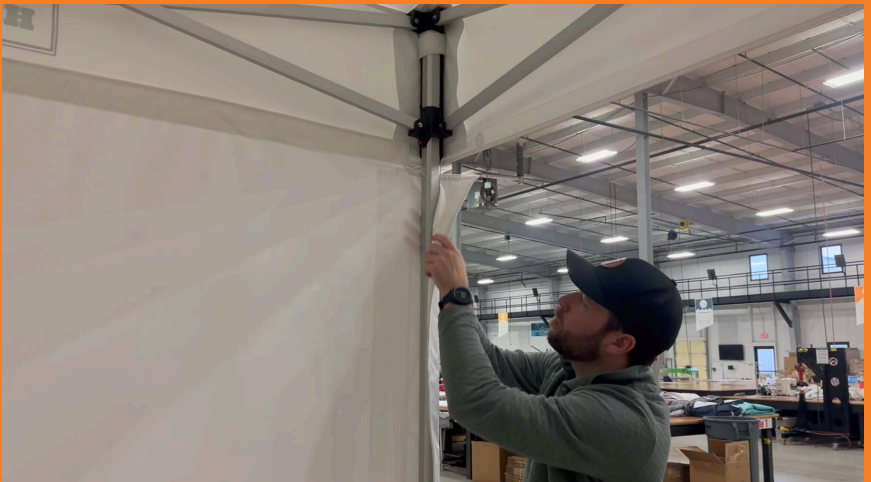

**7** Repeat steps 4-6 for the remaining side wall.



**8** If you have a fourth wall, unfold it and locate the top edge that is lined with Velcro. The top edge of the wall gets Velcroed to the inside of the valance on the roof by starting at one end and attaching it all the way across.

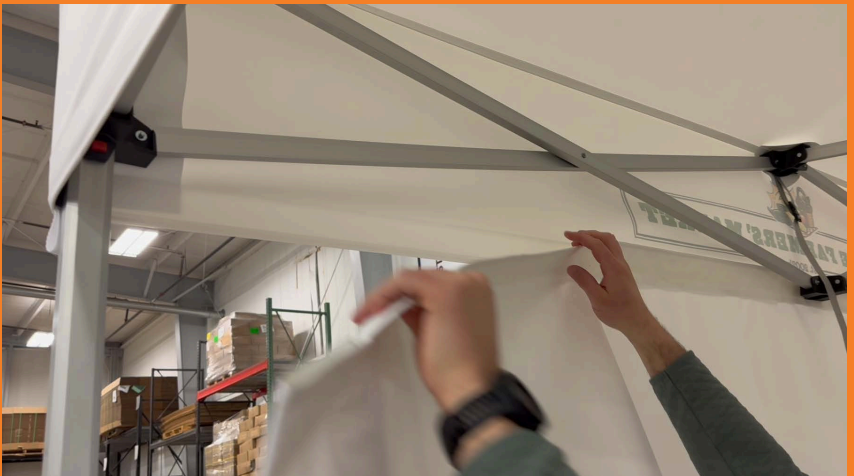

- 9** Unhook the Velcro on the left and right wall flaps. Wrap the opened flaps around the side walls of the tent, attaching to the strip of Velcro there.



- 10** Enjoy your tent!



# Thank you for your purchase!

If you have questions about installation, maintenance, or take down, please call us at (800)426-9496. Our goal is that you are completely satisfied with our products. Please read this installation manual carefully and follow all instructions contained herein. Please note that the installer is responsible for the site selection, installation and use. Do not erect during inclement weather and follow all safety procedures during the installation and take down process. Please contact all utility companies for underground services. In many states, the utilities work together and have formed a Utility Locating Service. It is your responsibility to locate all the underground services, including speaking to the owner about irrigation, pool and other special services that they may have installed. Also, please note that special precautions should be taken such that any overhead powerlines are duly noted and avoided during the tent erection process.

TentCraft Inc in no way represents the estimated holding power to be true in all cases. It is an estimate, and as such, does not imply that the figures are sufficient to hold any tent securely in windy or adverse weather conditions. The tent installer accepts sole responsibility for the safe installation, teardown, and maintenance of any tent. TentCraft does not represent in any way that the materials provided with the purchase of the tent are sufficient enough to hold it up in windy or adverse weather conditions. There is no way for TentCraft to know the site conditions or the weather conditions at the event. This leaves us unable to recommend the adequate amount of holding power needed to hold the tent safely in position. Furthermore, we are not responsible for the methods which the installer uses to erect the tent or anchor it in position. Installers MUST be empowered to deem the tent unsafe for occupancy if/when the weather becomes unstable.

