

HEATING UNIT SETUP INSTRUCTIONS



THANK YOU FOR YOUR PURCHASE!

If you have questions about installation, maintenance, or take down, please call us at (800)950-4553. Our goal is that you are completely satisfied with our products. Please read this installation manual carefully and follow all instructions contained herein. Please note that the installer is responsible for the site selection, installation and use. Do not erect during inclement weather and follow all safety procedures during the installation and take down process.

Please contact all utility companies for underground services. In many states, the utilities work together and have formed a Utility Locating Service. It is your responsibility to locate all the underground services, including speaking to the owner about irrigation, pool and other special services that they may have installed. Also, please note that special precautions should be taken such that any overhead powerlines are duly noted and avoided during the tent erection process.



TentCraft Inc in no way represents the estimated holding power to be true in all cases. It is an estimate, and as such, does not imply that the figures are sufficient to hold any tent securely in windy or adverse weather conditions. The tent installer accepts sole responsibility for the safe installation, teardown, and maintenance of any tent. TentCraft does not represent in any way that the materials provided with the purchase of the tent are sufficient enough to hold it up in windy or adverse weather conditions. There is no way for TentCraft to know the site conditions or the weather conditions at the event. This leaves us unable to recommend the adequate amount of holding power needed to hold the tent safely in position. Furthermore, we are not responsible for the methods which the installer uses to erect the tent or anchor it in position. Installers **MUST** be empowered to deem the tent unsafe for occupancy if/when the weather becomes unstable.

Step 1



 
Install the heater before fully extending the tent legs.

Step 2



Remove the heater from the box.

Step 3

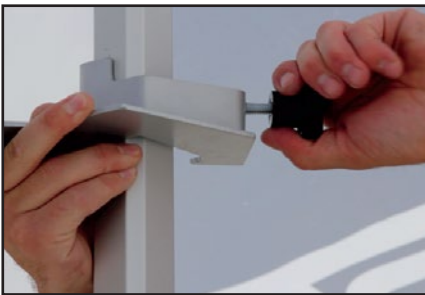

Locate the clamp on the heater and unscrew the black knob to open the clamp.

Step 4



 
Slide the opening onto the center tent pole at a height that is above all scissor pieces.

Step 5




Twist the black knob to tighten the clamp onto the pole to hold it in place.

Step 6

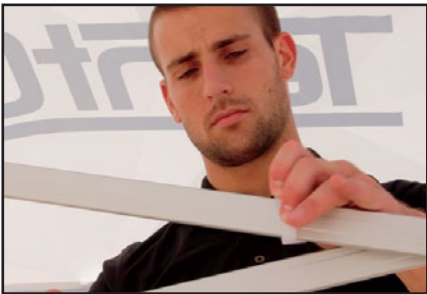

Attach the white plastic clips to the top of one of the scissor pieces – roughly every foot – until they reach the leg.

 Step 7

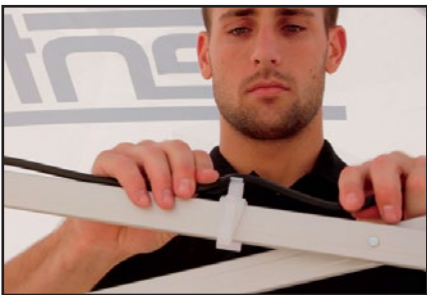

Press the cord down into the top of the plastic clips so that the cord runs neatly across the scissor piece and hangs down on the inside of the chosen leg.